



How to update AMI BIOS


Step 1, To run afuwingui.exe then click “Open”

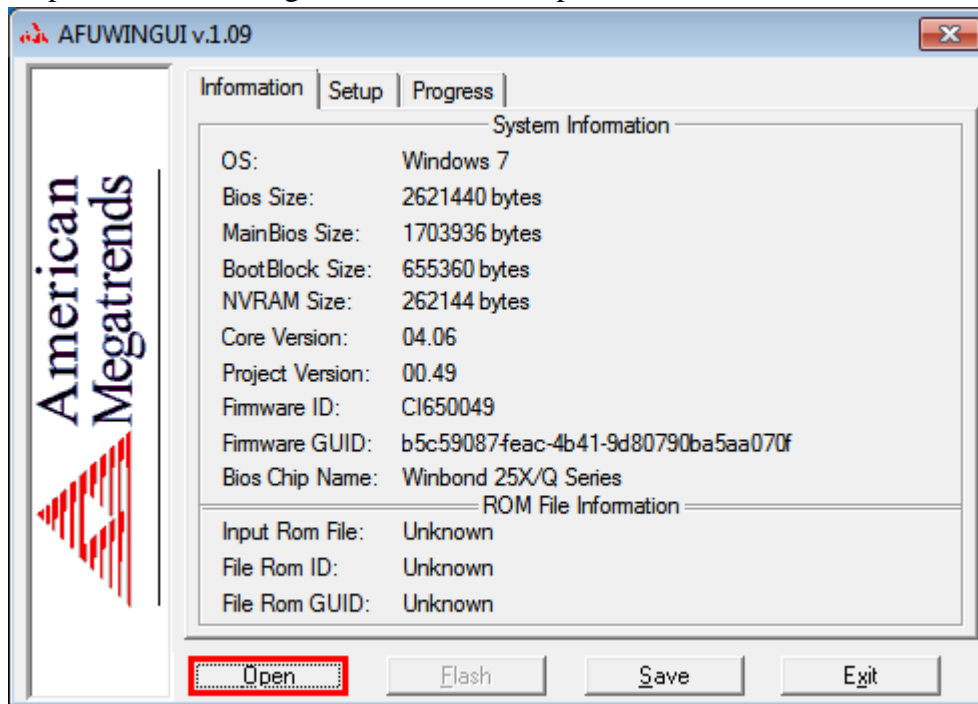


Step 2, Click the new version BIOS (download from the website)

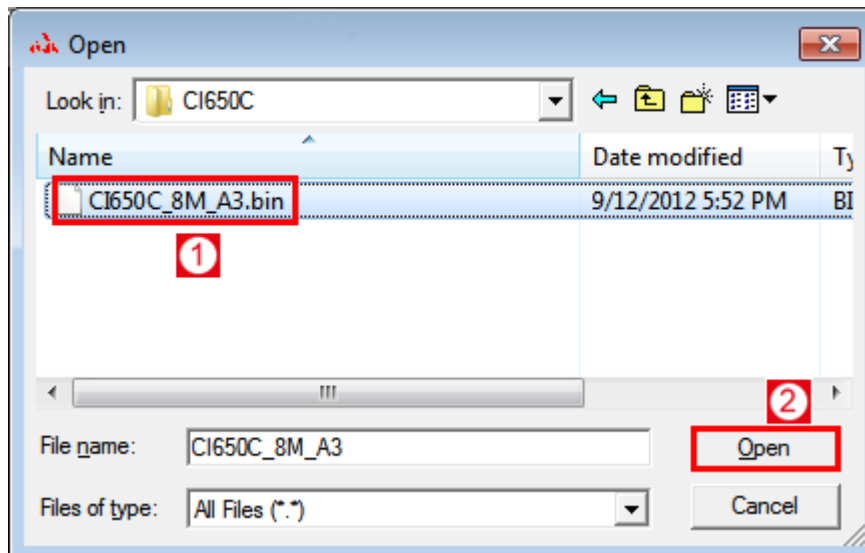

Step 3, Choose “Program All Blocks” and “Do Not Check ROM ID”

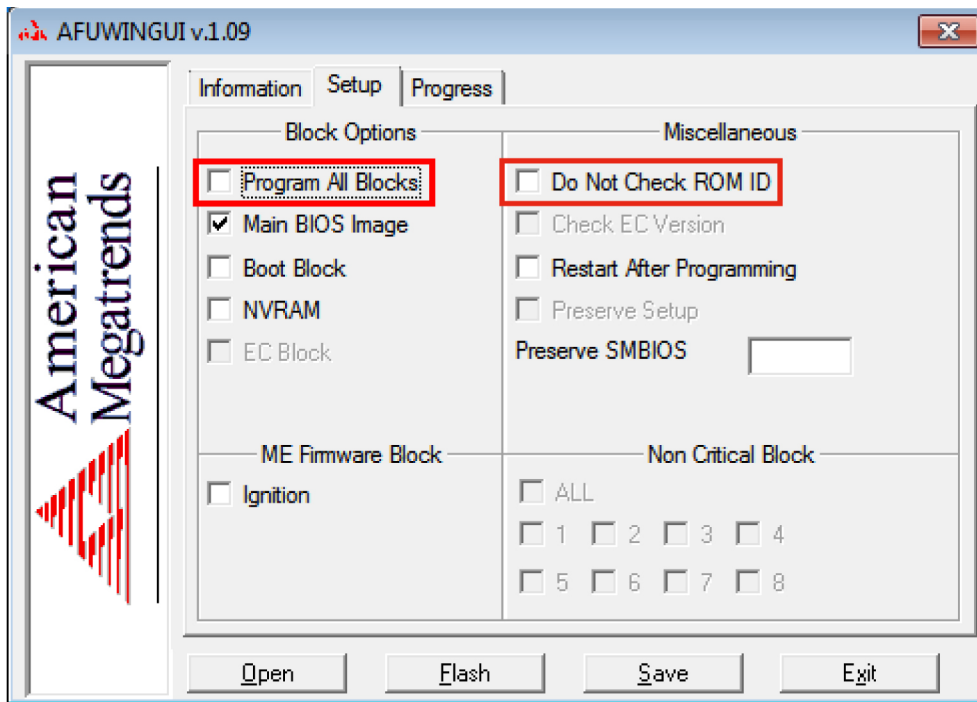

Step 4, Click “Flash”

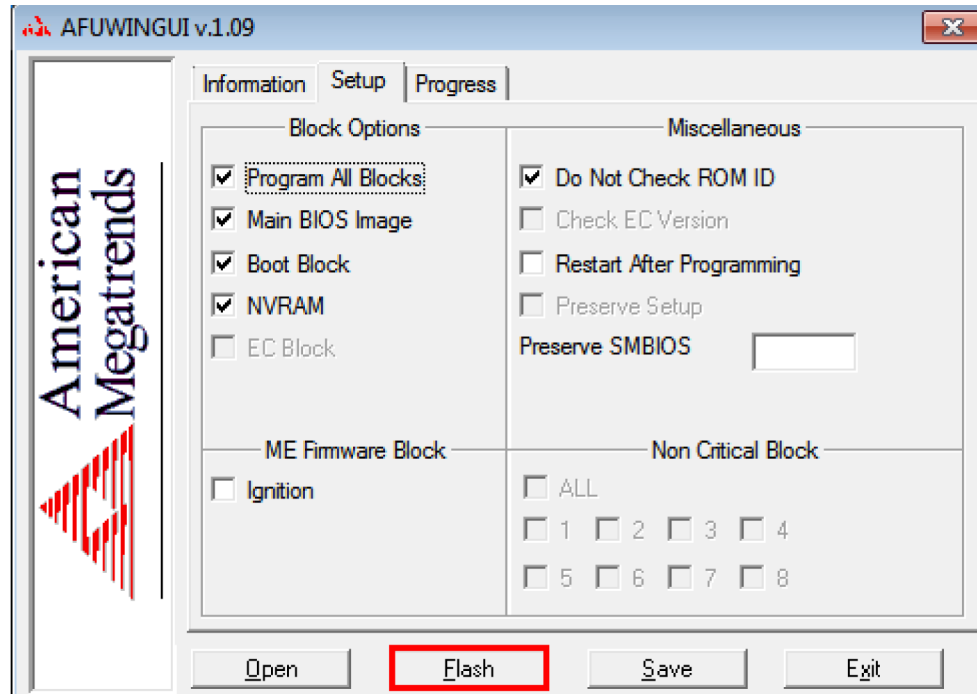

Step 5, Click “Exit” and restart computer.

